



Star 25.1

www.inspiration-for-glass.com

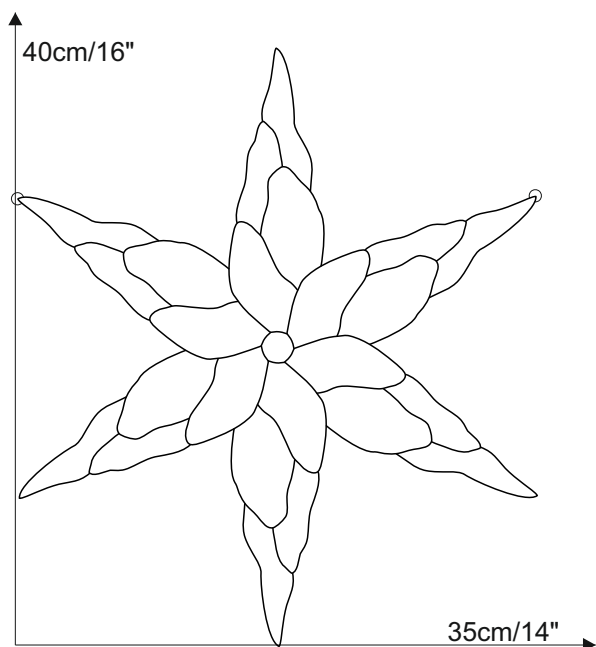

Star 25.1

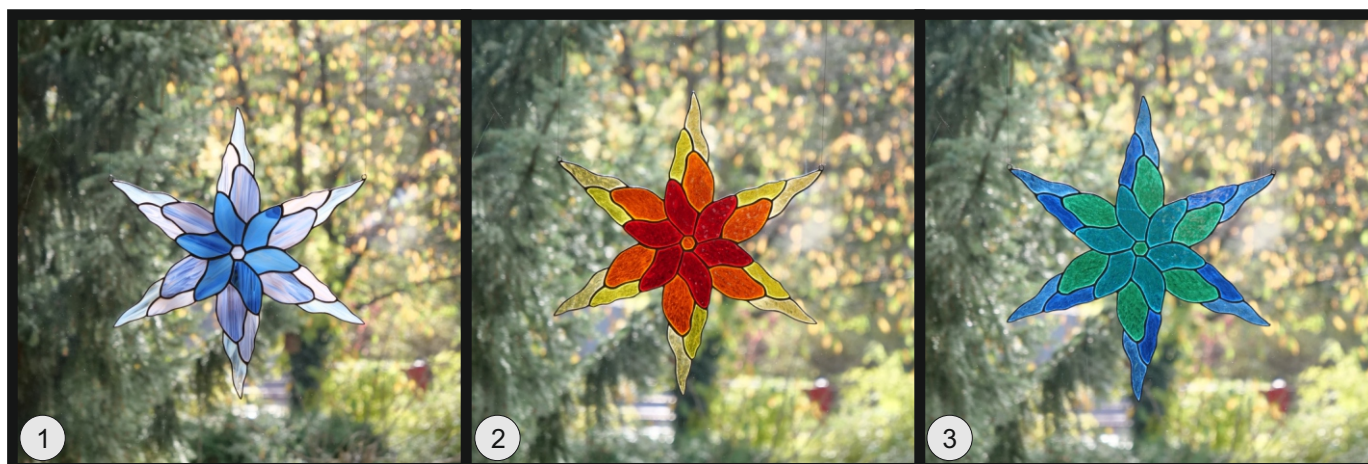

color compositions:





example 1:
Oceanside 838-96s-F, 843-92s-F, 349-1s-F, 818-91s-F

example 2:
Oceanside 151RR-F, 171RR-F, 161RR-F, 110-2RR-F

example 3:
Oceanside 533-3RR-F, 523-2RR-F, 134RR-F, 132RR-F


With this slightly larger of the 6-ray star, I recommend an amplified suspension. Depending on the soldering of the edge, a simple ring could demolish. So solder a 1mm thick brass wire to the outer glass part as shown below, which you form into an eyelet at the end.

Pattern in
original size

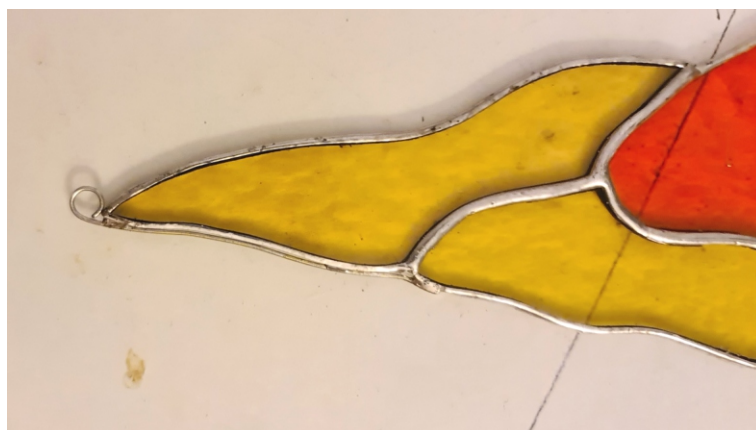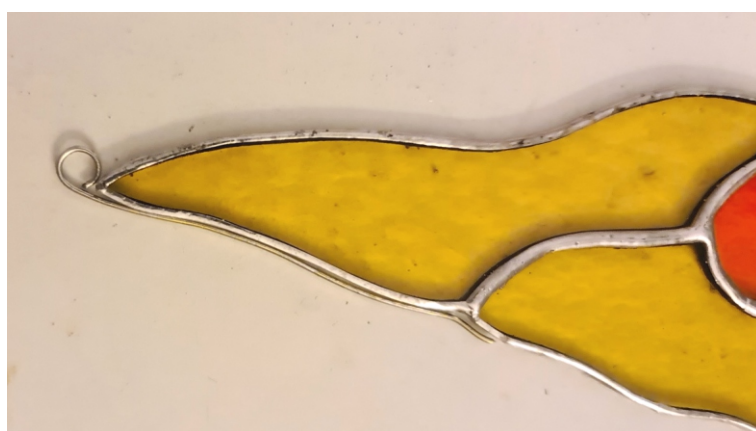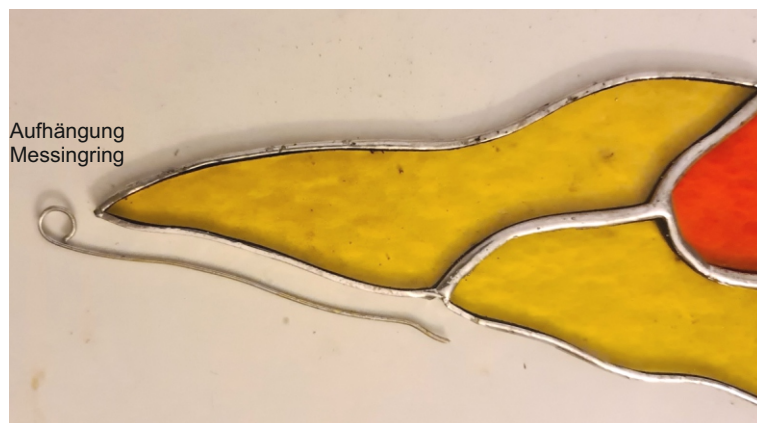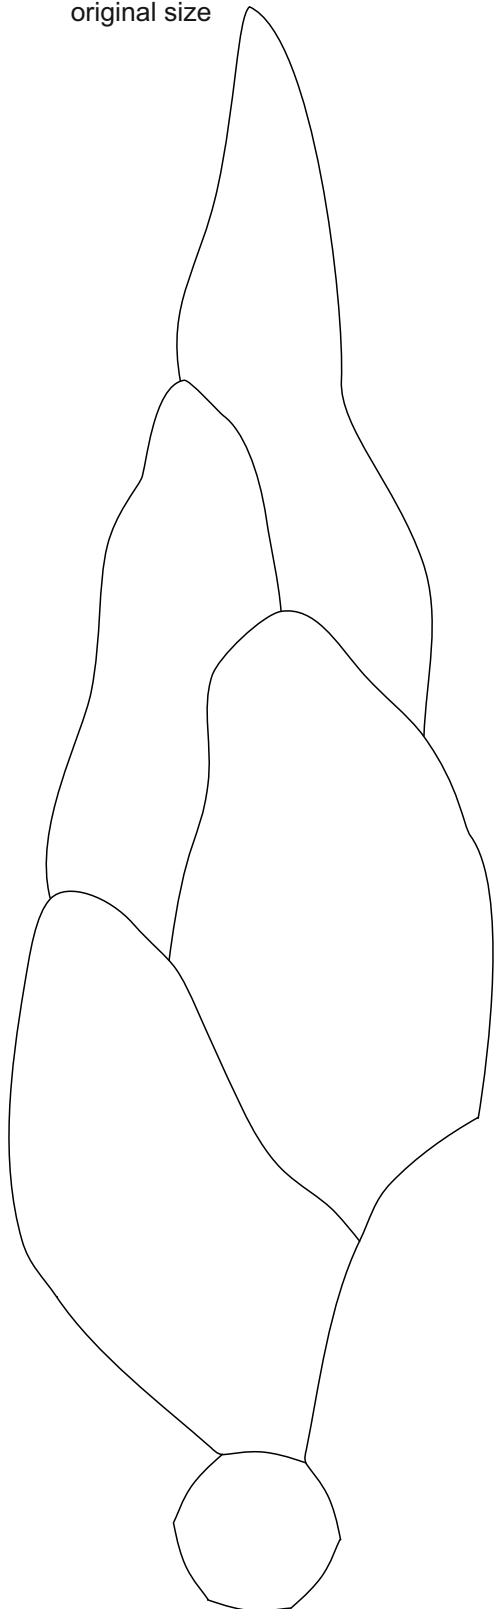


Original size

Suspension
Brass wire with eyelet



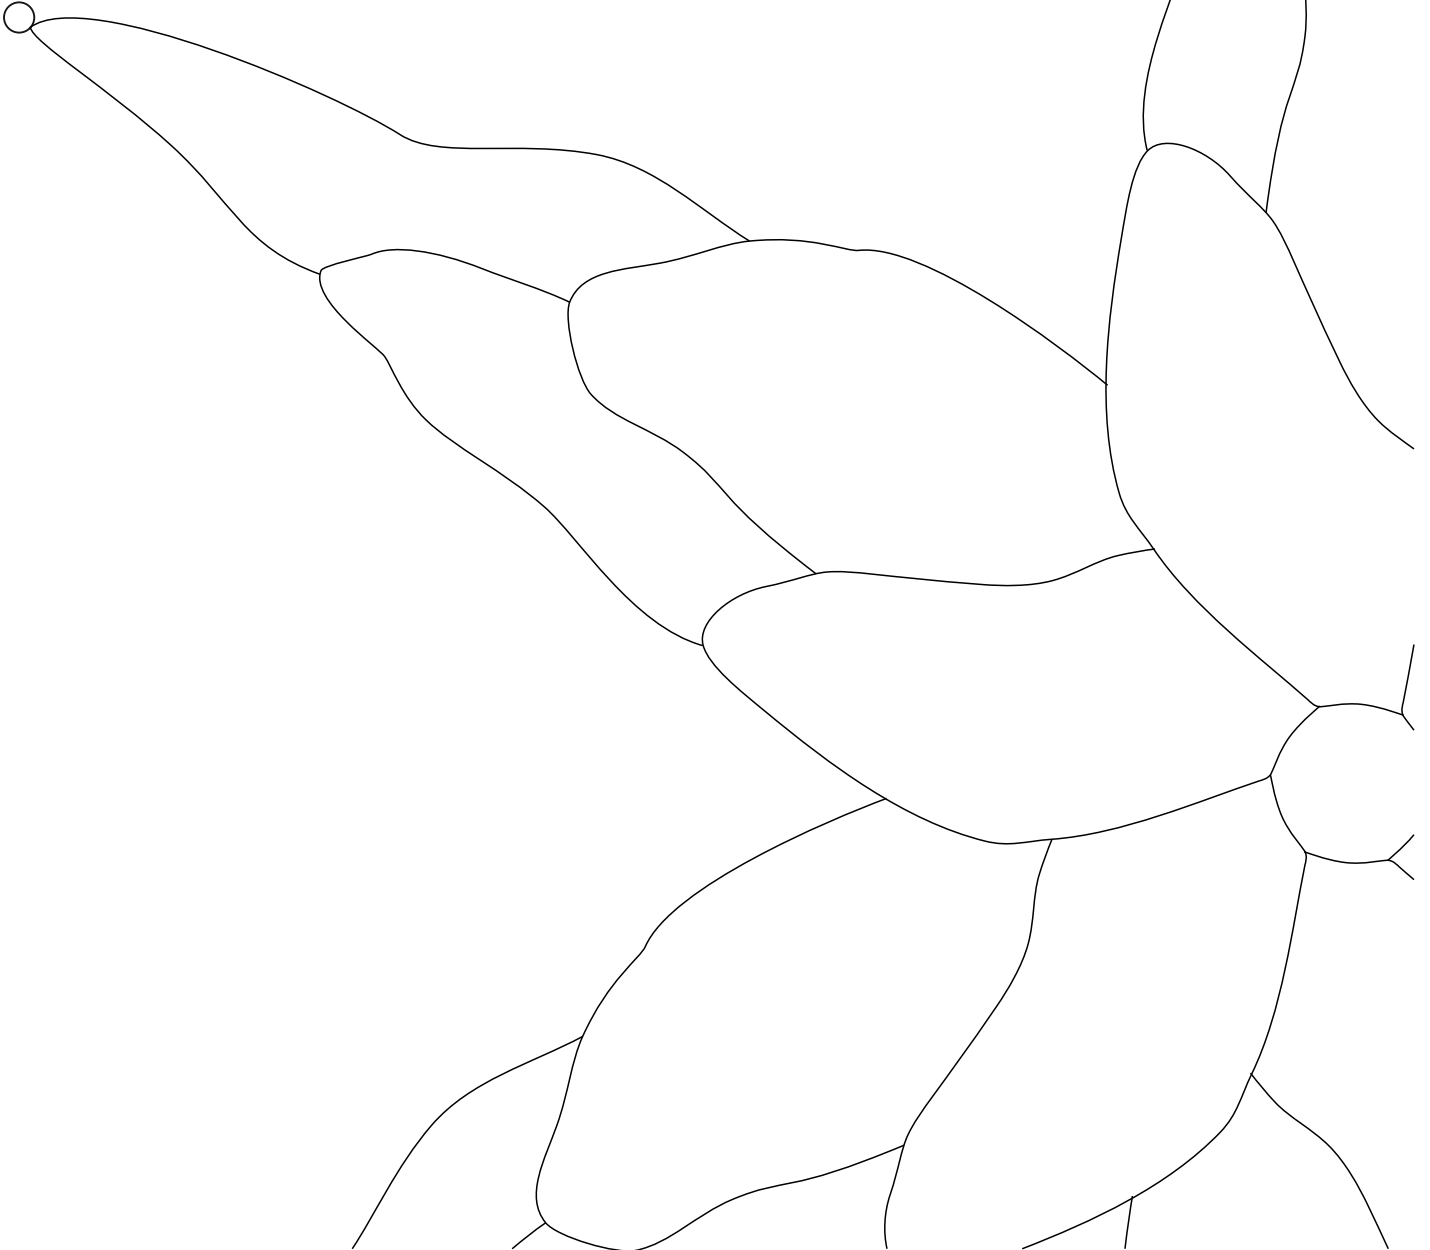


Original size

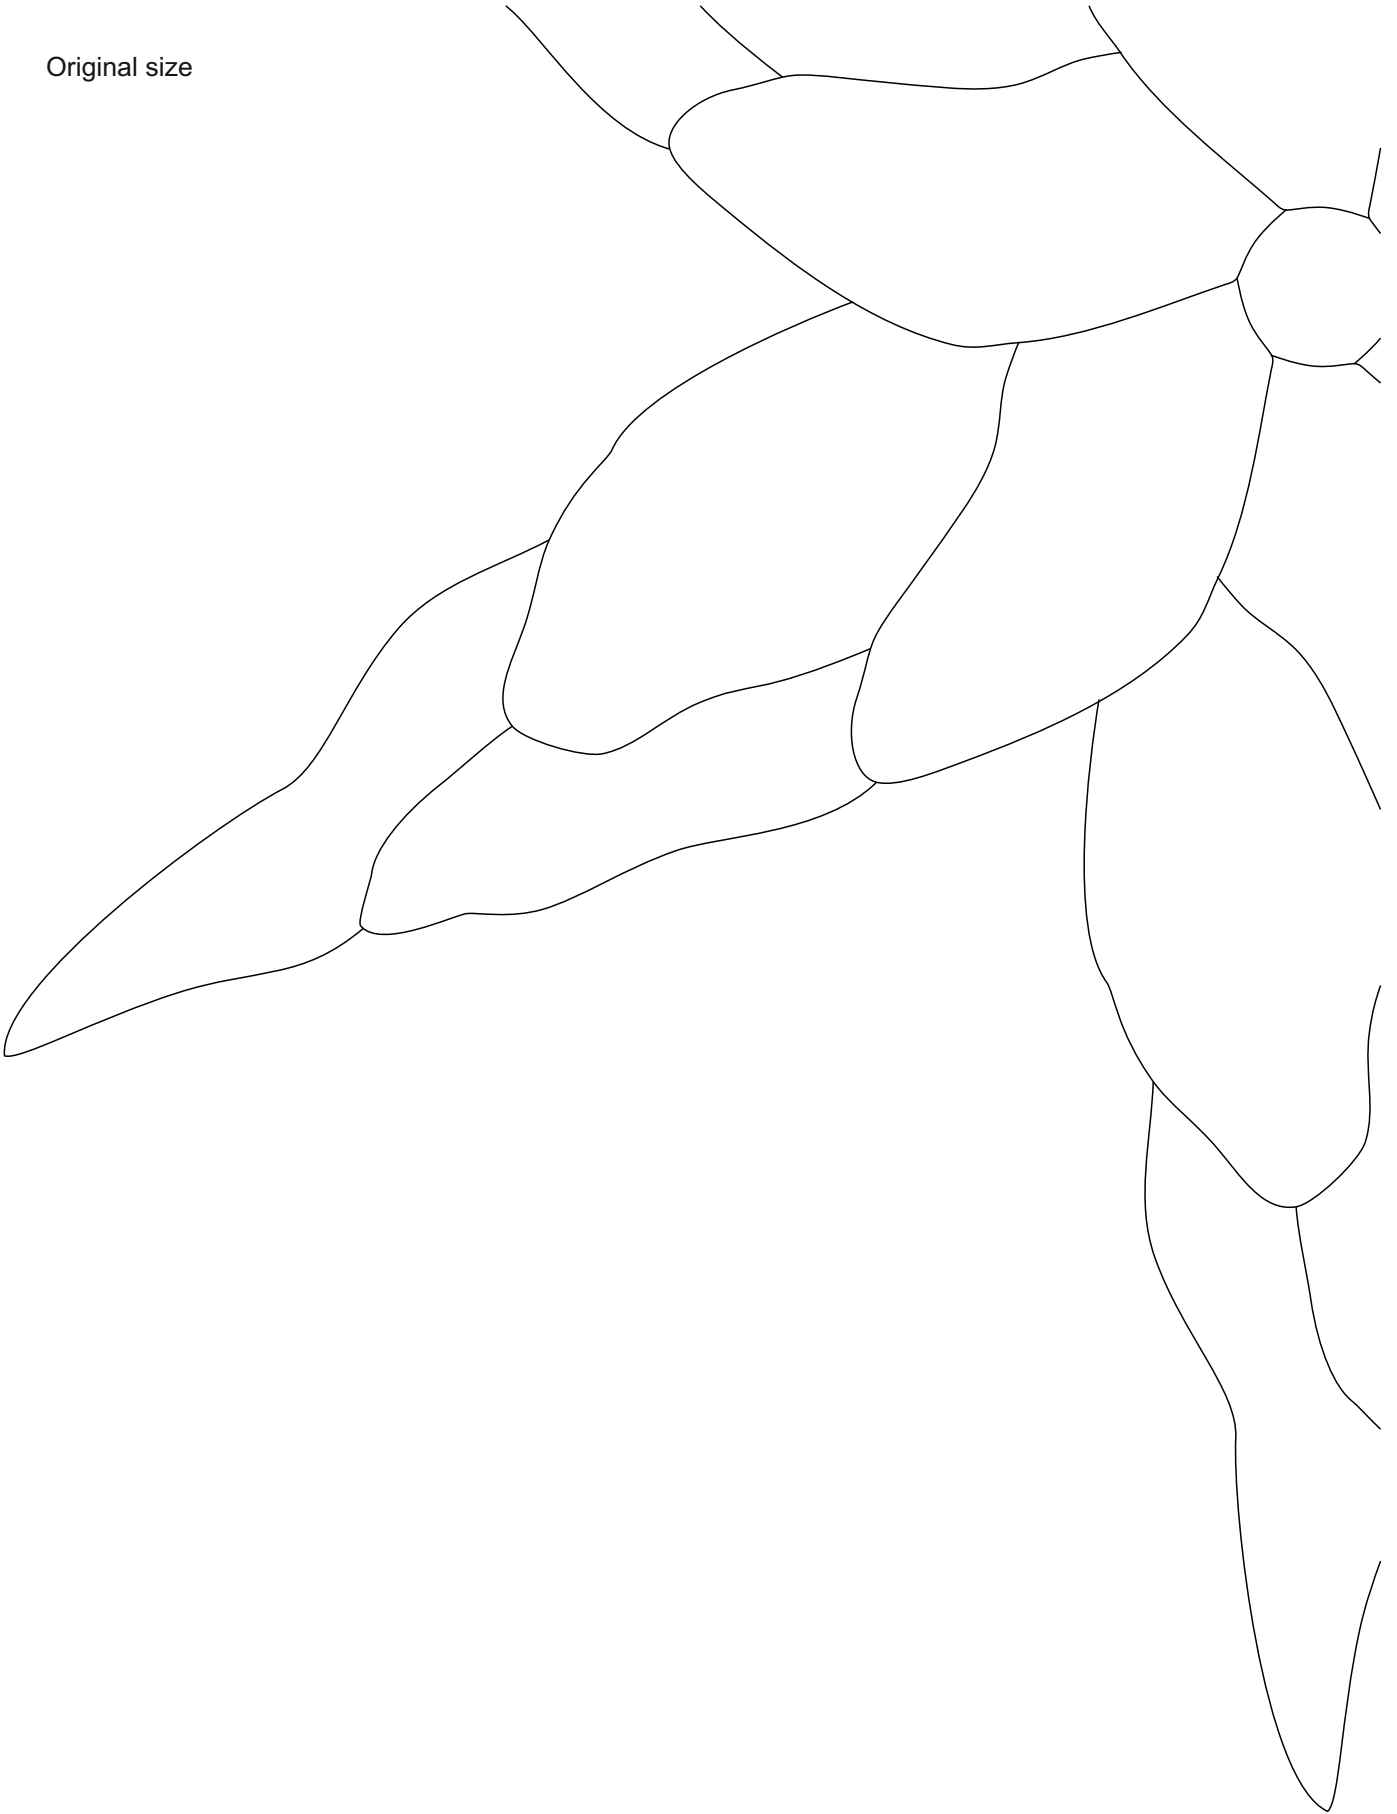

Original size

Suspension
Brass wire with eyelet

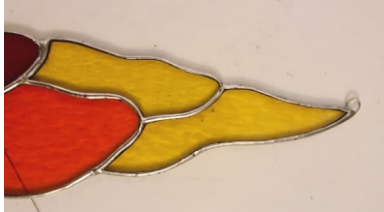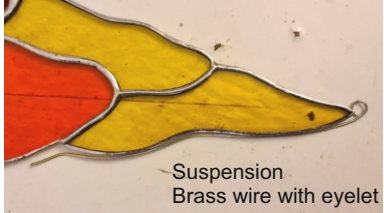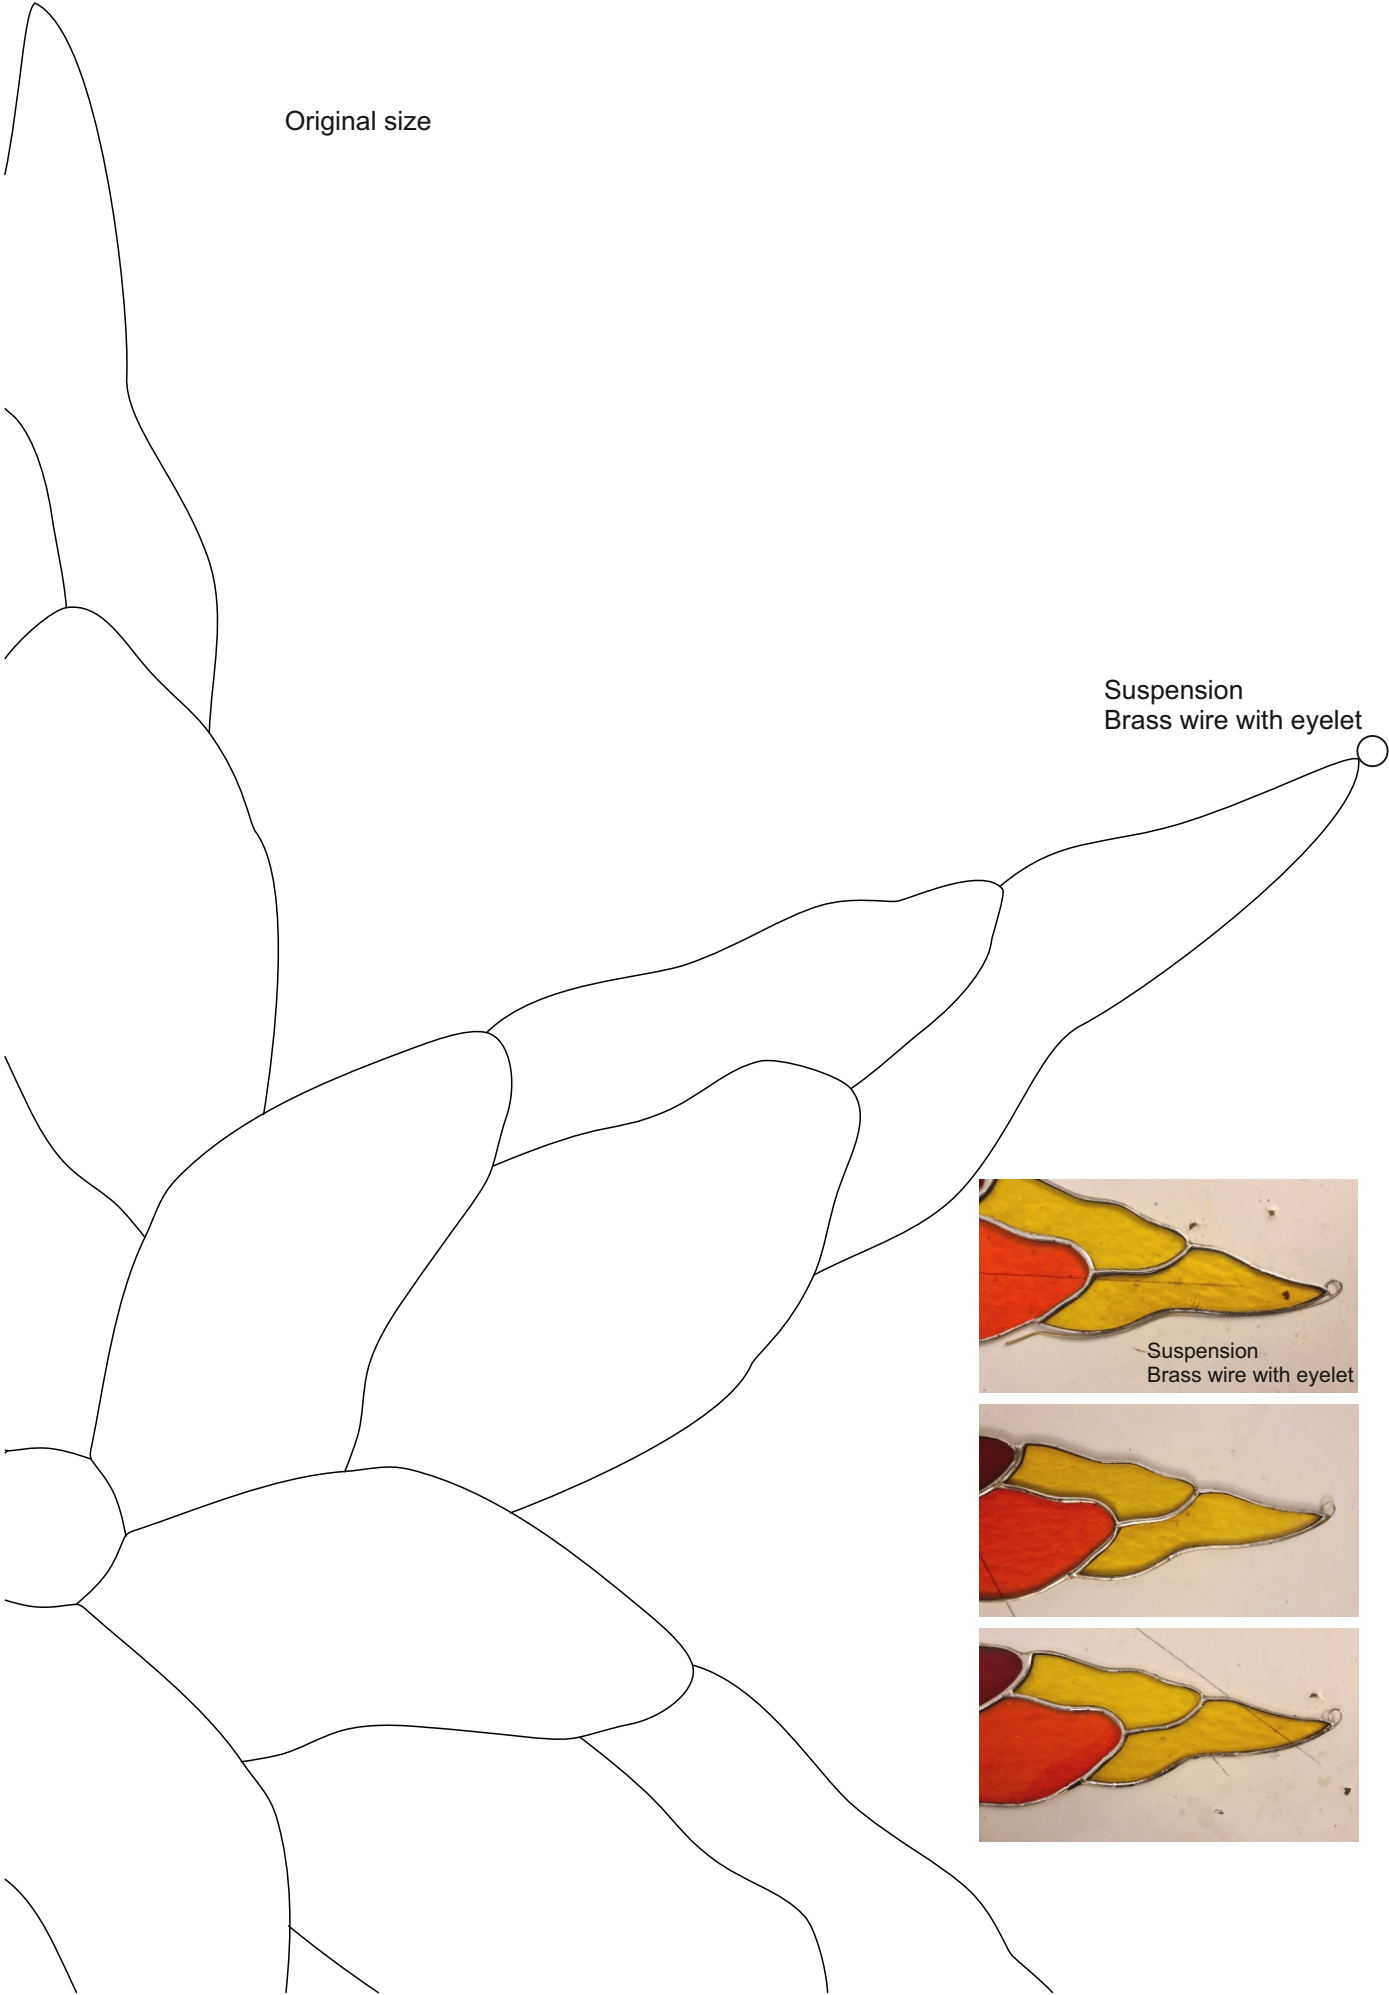



Original size